

## **Here is the procedure for reprogramming your pergola remotes.**

1. Change the 2 batteries (portable remote control (battery number 2430 and for the one on the leg (square) number 2032).
2. Take the (square) remote that goes on the leg and open the tab and see under the battery the right small rectangle with the numbers 1 and 2.
3. Put on the 2
4. Unplug the pergola for 1 minute.
5. Reconnect the pergola. (YOU HAVE 10 SECONDS TO GO TO STEP 6)
6. Take the portable remote control and press the center button for 10 seconds and you will hear a beep.
7. After beeping press the top button and hold down for 3 seconds.
8. After beeping press the bottom button and hold down for 3 seconds.
9. The 2 remote controls will be programmed for your pergola!!

Thank you, do not hesitate to contact us if necessary.